

INSTALLATION INSTRUCTION

01 - 06 Ford Escape
01 - 06 Mazda Tribute
4132

Parts List:

QTY

(1) Sidebar set	(1) Hardware Kit including:
(4) Front mounting brackets	(8) M8 x 30 mm hex. head bolt
(2) Rear mounting brackets	(16) 3/8 x 1 1/4" hex. head bolt
(2) Bolt plates	(24) 3/8" lock washer
	(24) 3/8" flat washer

Tools required:

13 mm 9/16" Socket	Ratchet
13 mm 9/16" Socket	


Instructions:

Approximated installation time: 25 min.

1. Read and understand instructions completely before beginning installation.
2. Sidebar set consists of a driver and passenger side. Be sure to determine the correct side before installation, the fold extreme is pointing to the front with the fold bent to outside.
3. Locate on the backside of the rocker panel, the threaded holes, as shown in Picture 1. Bolt front mounting brackets using M8 x 30 mm hex head bolts, 3/8" flat and lock washers. Leave loose. Picture 2.
4. Locate on the bottom of the rocker panel existing slots as shown in Picture 3. Then introduce a bolt plate through the hole beside the existing slots as shown in Picture 4. Bolt rear mounting bracket to the bolt plate using 3/8 x 1 1/4" hex head bolts, flat and lock washers. Leave loose. Picture 5.
5. Bolt mounting brackets to sidebar using 3/8 x 1 1/4" hex head bolts, flat and lock washers. Leave loose.
6. Make any final adjustments to the alignment of the sidebar on the vehicle and then tighten all of the fasteners. Repeat for the opposite side.
7. You may need to periodically re-tighten the fasteners on your sidebar


Assembly Diagram:

Picture 1

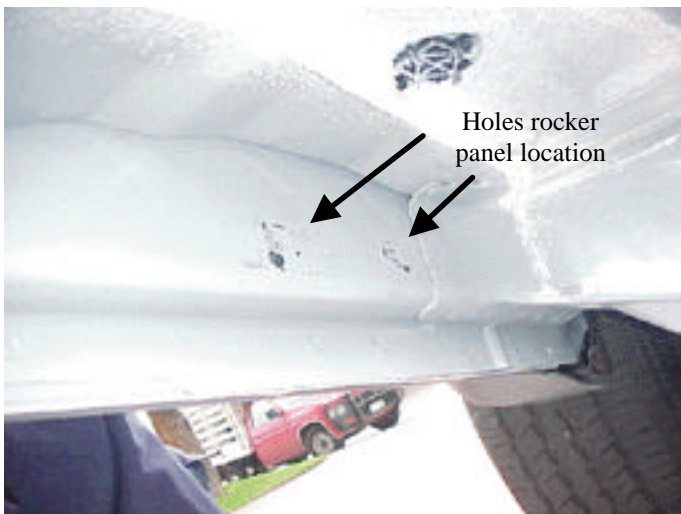

Picture driver side

Picture 2

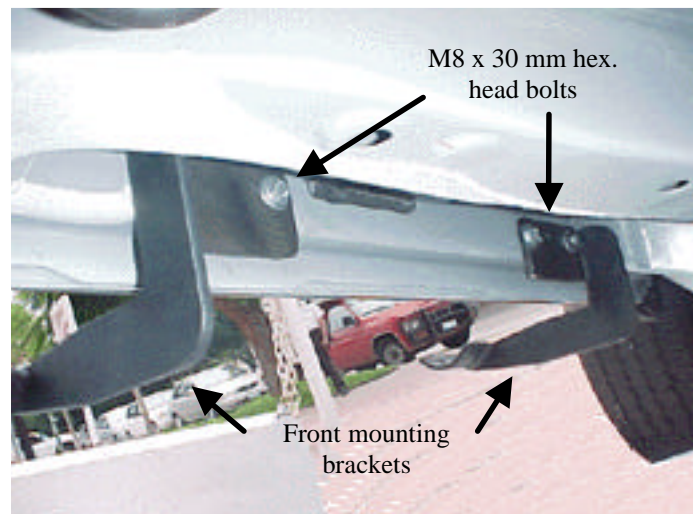

Picture driver side

Cleaning and Care instructions:

Protect the finish with a non-abrasive automotive wax, (e. g. Pure Carnauba) on a regular basis. The use of any soap, polish, or wax that contains an abrasive is detrimental to the finish, as the compounds scratch the finish and cause corrosion.

